

# OAKLEY RAZRWire™

## USING RAZRWire™

TURN RAZRWire ON	Press the multifunction button briefly.
ANSWER A CALL	Press the multifunction button briefly.
ADJUST VOLUME	Press the front button repeatedly to increase the volume. Press the middle button repeatedly to decrease the volume.
MUTE THE MICROPHONE	Press and hold middle button (the "volume down" button) for 2 seconds.
END A CALL	Press the multifunction button briefly.
TURN RAZRWire OFF	Press and hold the multifunction button for 4 seconds.

The remaining functions of RAZRWire™ depend on which Bluetooth® profile and features your cellular phone supports. Consult the user's guide that came with your phone, then use the appropriate table below:

## HEADSET PROFILE

SEND A NUMBER DIALED ON THE PHONE	Press the multifunction button
DIAL BY VOICE	Press the multifunction button then speak the name
REDIAL A NUMBER	Press the multifunction button to recall the number, then press again to send
TRANSFER CALL FROM PHONE TO RAZRWire	Press the multifunction button

## HANDSFREE PROFILE

REJECT A CALL	Press and hold the multifunction button for 2 seconds
DIAL BY VOICE	Press the multifunction button briefly then speak the name
REDIAL A NUMBER	Press and hold the multifunction button for 2 seconds
PUT A CALL ON HOLD	Press and hold the front button for 2 seconds
ANSWER 2ND INCOMING CALL (AND PUT CURRENT CALL ON HOLD)	Press and hold the front button for 2 seconds
TOGGLE BETWEEN TWO ACTIVE CALLS	Press and hold the front button for 2 seconds
TRANSFER CALL FROM PHONE TO RAZRWire	Press the multifunction button briefly

# OAKLEY RAZR WIRE™

## VISUAL INDICATORS

DURING CHARGING	The indicator light is solid red while charging. It turns off completely when charging is complete.
DURING PAIRING	The light stays on. (If the light is not solid red, you will not be able to pair with the phone you are using.) The light flashes rapidly 10 times when pairing is successful.
WHILE NOT ON A CALL (STANDBY MODE)	The light is completely off.
WHILE A NEW CALL IS COMING IN	The light turns on every six seconds and stays on for two seconds.
WHILE ON A CALL	The light turns on every six seconds and stays on for two seconds.

## AUDIBLE INDICATORS

NO AUDIBLE TONES; DETERIORATING AUDIO QUALITY	Out of range. (Move RAZRWire™ closer to your phone.)
SINGLE HIGH TONE DURING VOLUME ADJUSTMENT	Maximum or minimum volume level is reached.
RING TONE	Incoming call.
SINGLE LOW TONE	Ready for voice dialing. (When heard after pressing the Multifunction Button, speak the name of the person you want to dial.)
DUAL HIGH/LOW TONE	The name of the person you want to dial is not recognized. Low battery.
FAST HIGH/LOW TONE EVERY FIVE SECONDS	No network/service. (Your cellular phone is currently unable to communicate with your phone service.)
FOUR TONES, LOW TO HIGH	RAZRWire™ is powered on
FOUR TONES, HIGH TO LOW	RAZRWire™ is powered on



OAKLEY

